

# CSB 160 Hg-frei

## COD Hg-free/DCO sans Hg/DQO sin Hg

### Test 0-26

REF 963 026




Rundküvettentest / Tube test  
 Test en cuves rondes / Prueba en cubeta cilíndrica

436 nm


Method(e) / Método

0261


15–160 mg/L

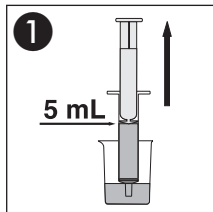


**1**  
 5 mL  
 ca. 5 mL Probe  
 Sample  
 Echantillon  
 Muestra

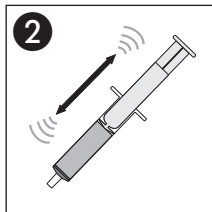


**2**  
 Kräftig schütteln  
 Shake well  
 Bien agiter  
 Agitar intensamente

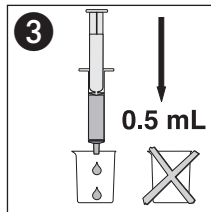


**3**  
 ca. 0.5 mL verwerfen  
 reject  
 rejeter  
 desechar

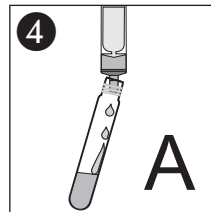


**4**  
 In Leerküvette überführen  
 Fill into **empty** tube  
 Introduire dans cuve **vide**  
 Llenar en tubo **vacío**

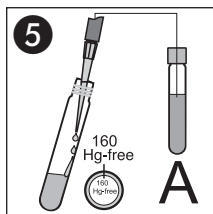


**5**  
 2.0 mL **A** in Küvette CSB 160  
 into tube COD 160  
 dans tube DCO 160  
 en tubo DQO 160

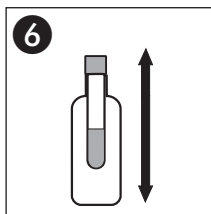


**6**  
 Sicherheitsgefäß  
 Safety bottle  
 Récipient de sécurité  
 Recipiente de seguridad

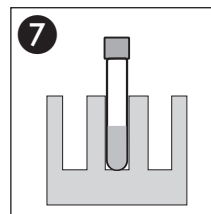


**7**  
 148 °C/2 h

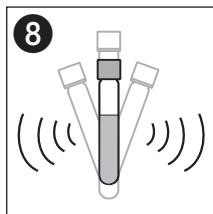


**8**  
 Schütteln  
 Shake  
 Agiter  
 Agitar

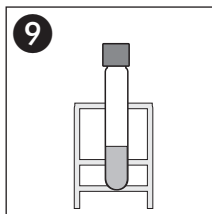

**9**  
 Abkühlen lassen  
 Allow to cool  
 Laisser refroidir  
 Dejar enfriar

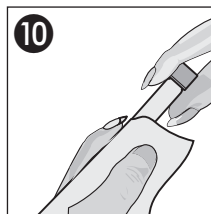

**10**  
 Säubern  
 Clean  
 Nettoyer  
 Limpiar

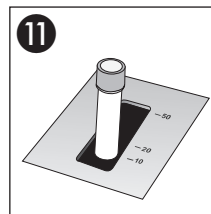

**11**  
 Messung  
 Measurement  
 Mesure  
 Medición