

MACX MCR-EX-SL-2NAM-R-UP(-SP)



Signal conditioner

Data sheet

104461_en_09

© Phoenix Contact

2023-08-25

1 Description

Signal conditioners are used for transfer of binary switching signals from the Ex area.

The NAMUR signal conditioner has been designed for the intrinsically safe operation of proximity sensors (in accordance with EN 60947-5-6 NAMUR) and open circuit or resistance circuit contacts and switches.

The input circuit is monitored for line faults (breakage and short circuit (LFD)) (can be switched on/off).

Errors are indicated by a red flashing LED (as per NE 44) and the output switches to a high-impedance state. Error messages can also be transmitted to the supply and error evaluation module via the DIN rail connector.

One relay (changeover contact) is provided as a signal output for each channel.

The DIP switches can be used to set the direction of action (open or closed circuit current behavior).

The status of the respective channel is signaled via a yellow LED.

The power supply has been designed as a wide range supply (UP).

The module is suitable for safety-related applications up to SIL 2 according to IEC/EN 61508.

Features

- 2-channel
- Intrinsically safe inputs for NAMUR proximity sensors or switch contacts [Ex ia]
- Outputs: changeover contact relays
- Wide range power supply
- Direction of operation can be selected
- Line fault detection (LFD) can be enabled/disabled
- Up to SIL 2 according to IEC/EN 61508
- Safe 3-way electrical isolation
- Installation in Ex zone 2 permitted
- Plug-in connection terminal blocks, either screw or spring-cage connection technology (Push-in Technology)
- Housing width: 17.5 mm



Make sure you always use the latest documentation.

It can be downloaded from the product at phoenixcontact.com/products.

This document is valid for the products listed in the "Ordering data" chapter.



You can use the Signal Conditioner app to call-up DIP switch setting help and comprehensive module information via the integrated QR code reader.

2	Table of contents	
1	Description	1
2	Table of contents	2
3	Ordering data	3
4	Technical data	6
5	Safety regulations and installation notes.....	11
6	Installation	13
7	Derating.....	17
8	Configuration	18
9	Comparison of the safety data	20
10	Safety-related applications (IEC 61508 Edition 2)	21
11	Safety-related applications (IEC 61508 Edition 1)	27
12	Digital nameplate.....	31
13	Revision history	31

3 Ordering data

Description	Type	Item no.	Pcs./Pkt.
2-channel Ex i NAMUR signal conditioner with wide range power supply for proximity sensors and switches. In terms of signal output, for each channel there is a relay with a changeover contact available. Fault detection (LFD), 3-way isolation, SIL 2.	MACX MCR-EX-SL-2NAM-R-UP	2865984	1
2-channel Ex i NAMUR signal conditioner with wide range power supply for proximity sensors and switches. In terms of signal output, for each channel there is a relay with a changeover contact available. Fault detection (LFD), 3-way isolation, SIL 2.	MACX MCR-EX-SL-2NAM-R-UP-SP	2924249	1
Accessories	Type	Item no.	Pcs./Pkt.
The partition plate is used to maintain Ex i isolating distances when Ex i and non-Ex i devices are mounted side by side on a DIN rail.	MCR-DP	1430594	1
Filler plug, Accessories, product range: Accessories, width: 24.6 mm	EA-MSTB 2,5/ 5	1831016	50
Insulating sleeve, color: white	MPS-IH WH	0201663	10
Insulating sleeve, color: red	MPS-IH RD	0201676	10
Insulating sleeve, color: blue	MPS-IH BU	0201689	10
Insulating sleeve, color: yellow	MPS-IH YE	0201692	10
Insulating sleeve, color: green	MPS-IH GN	0201702	10
Insulating sleeve, color: gray	MPS-IH GY	0201728	10
Insulating sleeve, color: black	MPS-IH BK	0201731	10
Test plugs, with solder connection up to 1 mm ² conductor cross section, number of positions: 1, color: gray	MPS-MT	0201744	10
Plastic label, Sheet, white, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, BLUEMARK CLED, PLOTMARK, CMS-P1-PLOTTER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9)	0819291	10
Plastic label, Sheet, yellow, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, BLUEMARK CLED, PLOTMARK, CMS-P1-PLOTTER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9) YE	0822602	10
Plastic label, can be ordered: by sheet, white, labeled according to customer specifications, mounting type: adhesive, lettering field size: 11 x 9 mm	UC-EMLP (11X9) CUS	0824547	1
Plastic label, can be ordered: by sheet, yellow, labeled according to customer specifications, mounting type: adhesive, lettering field size: 11 x 9 mm	UC-EMLP (11X9) YE CUS	0824548	1

Accessories	Type	Item no.	Pcs./Pkt.
Plastic label, Sheet, silver, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, BLUEMARK CLED, PLOTMARK, CMS-P1-PLOTTER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9) SR	0828094	10
Plastic label, can be ordered: by sheet, silver, labeled according to customer specifications, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 10	UC-EMLP (11X9) SR CUS	0828098	1
Plastic label, Card, white, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, THERMOMARK PRIME, THERMOMARK CARD 2.0, THERMOMARK CARD, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 135	US-EMLP (11X9)	0828789	10
Plastic label, Card, yellow, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, THERMOMARK PRIME, THERMOMARK CARD 2.0, THERMOMARK CARD, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 135	US-EMLP (11X9) YE	0828871	10
Plastic label, Card, silver, unlabeled, can be labeled with: BLUEMARK ID COLOR, BLUEMARK ID, THERMOMARK PRIME, THERMOMARK CARD 2.0, THERMOMARK CARD, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 135	US-EMLP (11X9) SR	0828872	10
Device marker, Sheet, white, unlabeled, can be labeled with: TOPMARK NEO, TOPMARK LASER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 255	LS-EMLP (11X9) WH	0831678	10
Device marker, Sheet, silver, unlabeled, can be labeled with: TOPMARK NEO, TOPMARK LASER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 255	LS-EMLP (11X9) SR	0831705	10
Device marker, Sheet, yellow, unlabeled, can be labeled with: TOPMARK NEO, TOPMARK LASER, mounting type: adhesive, lettering field size: 11 x 9 mm, Number of individual labels: 255	LS-EMLP (11X9) YE	0831732	10
Power and fault signaling module with screw connection, including corresponding ME 17,5 TBUS 1,5/ 5-ST-3,81 GY DIN rail connector	MACX MCR-PTB	2865625	1
Power and fault signaling module with Push-in connection, including corresponding ME 17,5 TBUS 1,5/ 5-ST-3,81 GY DIN rail connector	MACX MCR-PTB-SP	2924184	1
Primary-switched power supply, QUINT POWER, screw connection, DIN rail mounting, supply of devices possible via the TBUS DIN rail connector, protective coating, input: single-phase, output: 24 V DC/2.5 A	QUINT4-SYS-PS/1AC/24DC/ 2.5/SC	2904614	1

Accessories	Type	Item no.	Pcs./Pkt.
End cover, length: 56 mm, width: 2.5 mm, height: 56 mm, color: gray	D-UKK 3/5	2770024	50
End cover, length: 56 mm, width: 2.5 mm, height: 56 mm, color: blue	D-UKK 3/5 BU	2770105	50
Double-level terminal block, with preassembled resistors	UKK 5-2R/NAMUR	2941662	50
Actuation tool, for ST terminal blocks, insulated, also suitable for use as a bladed screwdriver, size: 0.6 x 3.5 x 100 mm, 2-component grip, with non-slip grip	SZS 0,6X3,5	1205053	10

4 Technical data

Hardware/firmware version

Hardware/firmware version 12 / -

The technical data and safety characteristics are valid as of the specified HW/FW version.

Input data NAMUR

Description of the input	Intrinsically safe
Input signals	NAMUR proximity sensors (IEC/EN 60947-5-6) Floating switch contacts Switch contacts with resistance circuit
Short-circuit current	8 mA
Switching hysteresis	< 0.2 mA
Line fault detection	< 0.05 mA ... 0.35 mA (Line break) < 100 Ω ... 360 Ω (Short circuit) Activated /deactivated via DIP switch
Non-load voltage	8 V DC
Switching threshold "0" signal current	< 1.2 mA (blocking)
Switching threshold "1" signal, current	> 2.1 mA (conductive)

Output data Relay output

Number	2
Contact switching type	1 changeover contact per channel
Contact material	AgSnO ₂ , hard gold-plated
Switching behavior	can be inverted using DIP switch
Maximum switching voltage	250 V AC (2 A, 60 Hz) 120 V DC (0.2 A) 30 V DC (2 A)
Mechanical service life	10 ⁷ cycles

General data

Nominal supply voltage range	24 V AC/DC ... 230 V AC/DC -20 % ... +10 % (50/60 Hz)
Supply voltage range	19.2 V AC/DC ... 253 V AC/DC (50/60 Hz)
Max. current consumption	< 80 mA < 42 mA (24 V DC)
Power dissipation	< 1.1 W
Power consumption	< 1.1 W
Step response (10-90%)	typ. 6 ms (N/O contact: OFF/ON) typ. 6 ms (N/O contact: ON/OFF) typ. 4 ms (N/C contact: ON/OFF) typ. 10 ms (N/C contact: OFF/ON)
Degree of protection	IP20 (not assessed by UL)
Flammability rating according to UL 94	V0 (Housing)
Status display	Green LED (supply voltage) LED yellow (switching state) Red LED (line errors)

General data

Dimensions W/H/D	17.5 mm / 112.5 mm / 113.7 mm (MACX MCR-EX-SL-2NAM-R-UP) 17.5 mm / 107.9 mm / 113.7 mm (MACX MCR-EX-SL-2NAM-R-UP-SP)
Depth (Snapped onto DIN rail NS 35/7,5 in accordance with EN 60715)	114.5 mm
Type of housing	PA 6.6-FR

Ambient conditions

Ambient temperature (operation)	-40 °C ... 60 °C (Any mounting position)
Ambient temperature (operation)	-40 °C ... 70 °C (Derating)
Ambient temperature (storage/transport)	-40 °C ... 80 °C
Permissible humidity (operation)	10 % ... 95 % (non-condensing)
Altitude	≤ 2000 m
Ambient temperature (operation)	-40 °C ... 60 °C
Ambient temperature (operation)	-40 °C ... 70 °C (Derating)
Rated insulation voltage	253 V AC (Power supply, input / output) 125 V DC (Power supply, input / output)
Height range	> 2000 m ... 3000 m
Ambient temperature (operation)	-40 °C ... 54 °C
Ambient temperature (operation)	-40 °C ... 63 °C (Derating)
Rated insulation voltage	190 V AC (Power supply, input / output) 110 V DC (Power supply, input / output)
Height range	> 3000 m ... 4000 m
Ambient temperature (operation)	-40 °C ... 48 °C
Ambient temperature (operation)	-40 °C ... 56 °C (Derating)
Rated insulation voltage	60 V AC/DC (Power supply, input / output)
Height range	> 4000 m ... 5000 m
Ambient temperature (operation)	-40 °C ... 42 °C
Ambient temperature (operation)	-40 °C ... 49 °C (Derating)
Rated insulation voltage	60 V AC/DC (Power supply, input / output)

Electrical isolation (≤ 2000 m above mean sea level)

Electrical isolation	3-way isolation
Test voltage	2.5 kV AC (50 Hz, 60 s)
Input/output	
Standards/regulations	IEC/EN 60079-11
Rated insulation voltage	375 V _{PP}
Overvoltage category	III
Pollution degree	2
Input/power supply	
Standards/regulations	IEC/EN 60079-11
Rated insulation voltage	375 V _{PP}
Overvoltage category	II
Pollution degree	2
Input/power supply	
Standards/regulations	IEC/EN 61010-1
Rated insulation voltage	300 V _{rms}
Overvoltage category	II
Pollution degree	2
Insulation	Safe isolation
Output 1/output 2/input, power supply	
Standards/regulations	IEC/EN 61010-1
Rated insulation voltage	300 V _{rms}
Overvoltage category	III
Pollution degree	2
Insulation	Safe isolation

Safety data in accordance with ATEX and IECEx (≤ 2000 m above mean sea level)

Max. output voltage U _o	9.56 V
Max. output current I _o	10.3 mA
Max. output power P _o	25 mW
Max. external inductivity L _o / Max. external capacitance C _o simple circuit	IIB/IIIC : 1000 mH / 26 μF
Max. external inductivity L _o / Max. external capacitance C _o simple circuit	IIC : 300 mH / 3.6 μF
Max. external inductivity L _o / Max. external capacitance C _o mixed circuit	IIB/IIA/I : 100 mH / 1 μF ; 5 mH / 1 μF ; 1 mH / 1 μF ; 10 μH / 1 μF
Max. external inductivity L _o / Max. external capacitance C _o mixed circuit	IIC : 100 mH / 510 nF ; 50 mH / 580 nF ; 5 mH / 600 nF ; 1 mH / 600 nF ; 10 μH / 600 nF
Max. internal inductance L _i	negligible
Max. internal capacitance C _i	negligible
Safety-related maximum voltage U _m	253 V AC/DC (Supply terminals)
Safety-related maximum voltage U _m	250 V AC (Output terminals)
Safety-related maximum voltage U _m	120 V DC (Output terminals)

Connection data	Screw connection	Push-in connection
Conductor cross section, rigid	0.2 mm ² ... 2.5 mm ²	0.2 mm ² ... 2.5 mm ²
Conductor cross section, flexible	0.2 mm ² ... 2.5 mm ²	0.2 mm ² ... 2.5 mm ²
Conductor cross section flexible (2 conductors with same cross section)		0.25 mm ² ... 0.34 mm ² (TWIN ferrule without plastic sleeve) 0.5 mm ² ... 1.5 mm ² (TWIN ferrule with plastic sleeve)
Conductor cross section AWG	24 ... 14	24 ... 14 24 ... 22 (TWIN ferrule without plastic sleeve) 20 ... 16 (TWIN ferrule with plastic sleeve)
Stripping length	7 mm	10 mm
Tightening torque	0.5 Nm ... 0.6 Nm	
Conformance with EMC directive		
Noise immunity according to EN 61000-6-2		
Noise emission according to EN 61000-6-4		

Conformance/Approvals

CE

CE-compliant
and EN 61326

ATEX

IBExU 10 ATEX 1005

⊕ II (1) G [Ex ia Ga] IIC
⊕ II (1) D [Ex ia Da] IIIC
⊕ II 3 (1) G Ex ec [ia Ga] nC IIC T4 Gc
⊕ I (M1) [Ex ia Ma] I

UKCA Ex (UKEX)

CML 22UKEX3528X

⊕ I (M1) [Ex ia Ma] I
⊕ II (1) G [Ex ia Ga] IIC
⊕ II (1) D [Ex ia Da] IIIC
⊕ II 3 (1) G Ex ec [ia Ga] nC IIC T4 Gc

IECEX

IECEX IBE 10.0002X

[Ex ia Ga] IIC
[Ex ia Da] IIIC
Ex ec [ia Ga] nC IIC T4 Gc
[Ex ia Ma] I

CCC / China-Ex

2022122316115976

[Ex ia Ga] IIC
[Ex ia Da] IIIC
Ex ec nC [ia Ga] IIC T4 Gc

UL, USA/Canada

UL, C.D.-No 83104549

Class I Div 2; IS for Class I, II, III Div 1

Shipbuilding approval

DNV GL TAA000020C

Temperature

B

Humidity

B

Vibration

A

EMC

A

Enclosure

Required protection according to the Rules shall be provided upon installation on board

Safety Integrity Level (SIL, IEC 61508)

2

INMETRO

DNV 18.0116 X

[Ex ia Ga] IIC
[Ex ia Da] IIIC
Ex ec nC [ia Ga] IIC T4 Gc
[Ex ia Ma] I

5 Safety regulations and installation notes

5.1 Installation notes

- The device is an item of associated equipment with an EPL [Ga], [Da] (category 1) with “intrinsic safety” type of protection and can be installed in zone 2 potentially explosive areas as an EPL Gc (category 3) device. Intrinsically safe circuits can be led up to zone 0 / zone 20. It satisfies the requirements of the following standards. IEC/EN 60079-0, IEC/EN 60079-7, IEC/EN 60079-11, and IEC/EN 60079-15
ABNT NBR IEC 60079-0, ABNT NBR IEC 60079-7, ABNT NBR IEC 60079-11, ABNT NBR IEC 60079-15
GB/T 3836.1, GB/T 3836.3, GB/T 3836.4, GB/T 3836.8
For detailed information, please refer to the declarations of conformity.
- Installation, operation, and maintenance may only be carried out by qualified electricians. Follow the installation instructions as described.
- When installing and operating the device, observe the applicable regulations and safety directives (including national safety directives), as well as the generally recognized technical regulations.
- Observe the safety information, conditions, and limits of use specified in the product documentation. Comply with them.
- The device must not be opened or modified. Do not repair the device yourself, replace it with an equivalent device. Repairs may only be carried out by the manufacturer. The manufacturer is not liable for damage resulting from violation.
- The IP20 degree of protection (IEC/EN 60529) specifies that the device is intended for use in a clean and dry environment. Do not subject the device to mechanical and/or thermal stress that exceeds the specified limits.
- The device complies with the EMC regulations for industrial areas (EMC class A). When using the device in residential areas, it may cause radio interference.
- The device must be stopped if it is damaged, has been subjected to an impermissible load, stored incorrectly, or if it malfunctions.
- The products must be installed in accordance with all applicable standards for electrical systems in potentially explosive areas.
- Only use copper connecting cables.

5.2 Intrinsic safety

- The device is approved for intrinsically safe (Ex i) circuits up to zone 0 (gas) and zone 20 (dust) in the Ex area. The safety technology values for intrinsically safe equipment and the connecting lines must be observed for the hook-up process (IEC/EC 60079-14) and the values specified in this installation note and/or the EU examination certificate must be observed.
- When carrying out measurements on the intrinsically safe side, observe the relevant regulations regarding the connection of intrinsically safe equipment. Use only these approved measuring devices in intrinsically safe circuits.
- If the device was used in circuits which are not intrinsically safe, it is forbidden to use it again in intrinsically safe circuits. Label the device clearly as being not intrinsically safe.

5.3 Installation in the Ex area (zone 2)

- Observe the specified conditions for use in potentially explosive areas! Install the device in a suitable approved housing with a minimum degree of protection of IP54 that meets the requirements of IEC/EN 60079-7 or another degree of protection in accordance with ABNT NBR IEC 60079-0, Section 1 or GB/T 3836.1 and GB/T 3836.3. Also observe the requirements of IEC/EN 60079-14.
- Only devices which are designed for operation in Ex zone 2 and are suitable for the conditions at the installation location may be connected to the circuits in the Ex zone.
- In potentially explosive areas, connecting and disconnecting cables and plugs in non-intrinsically safe circuits, the latching of devices onto and unlatching devices from the DIN rail connector, and the actuation of DIP switches is only permitted in a de-energized state or when the atmosphere is not potentially explosive.
- The device must be stopped and immediately removed from the Ex area if it is damaged, was subject to an impermissible load, stored incorrectly or if it malfunctions.
- Temporary malfunctions (transients) must not exceed the value of 497 V (355 V x 1.4).
- The specified ambient temperature range of $-40^{\circ}\text{C} \leq T_{\text{amb}} \leq +60^{\circ}\text{C}$ (+70°C with derating) refers to the temperature inside the installation housing.

5.4 Installation in areas with a danger of dust explosions (zone 22)

- The device is not suitable for installation in zone 22.
- If, however, you wish to use the device in zone 22, you must install it in housing that complies with IEC/EN 60079-31. When doing so, observe the maximum surface temperatures. Observe the requirements of IEC/EN 60079-14.
- Connection to the intrinsically safe circuit in areas with a danger of dust explosions (zone 20, 21 or 22) is only permitted if the equipment connected to this circuit is approved for this zone (e.g., category 1D, 2D or 3D).

5.5 Safety-related applications (SIL)

When using the device in safety-related applications, observe the instructions in “Safety-related applications”, as the requirements differ for safety-related functions.

5.6 UL note

The safety specifications, which are based on UL approval, can be found in the “Control Drawing”. The “Control Drawing” is part of the package slip.

6 Installation

6.1 Connection notes



WARNING: Electrical danger due to improper installation

Observe the connection notes for safe installation in accordance with EN/UL 61010-1:

- Disconnecting devices and branch circuit protection with suitable AC or DC rating shall be provided in the building installation.
- The device is intended for installation in a control cabinet or in a comparable enclosure. The device may only be operated when it has been installed. The control cabinet must meet the requirements of UL/IEC 61010-1 in terms of protection against spread of fire and protection against electric shock or burn.
- Provide a switch/circuit breaker close to the device that is labeled as the disconnect device for this device (or the entire control cabinet).
- Provide overcurrent protection ($I \leq 16 \text{ A}$) within the installation.
- To protect the device against mechanical or electrical damage, install it in suitable housing with an appropriate degree of protection according to IEC/EN 60529.
- During installation, servicing, and maintenance work, disconnect the device from all effective power sources, provided you are not dealing with SELV or PELV circuits.
- If the device is not used as described in the documentation, the intended protection can be negatively affected.
- Thanks to its housing, the device has basic insulation to the neighboring devices, for $300 \text{ V}_{\text{eff}}$. If several devices are installed next to each other, this has to be taken into account, and additional insulation has to be installed if necessary! If the neighboring device is equipped with basic insulation, no additional insulation is necessary.
- The voltages applied at the input, output, and power supply are extra-low voltages (ELV). Depending on the application, the switching voltage at the relay output may be a hazardous contact voltage ($> 30 \text{ V AC} / > 60 \text{ V DC}$). Safe electrical isolation from other connections exists for such cases.
- Use of the device within an ambient temperature range from $>+60^\circ\text{C} \dots \leq +70^\circ\text{C}$ is described in Section "Derating".



WARNING: Explosion hazard

If the device has been used in non-intrinsically safe circuits, it must not be used again in intrinsically safe circuits.

The device must be clearly marked as non-intrinsically safe.

6.2 Electrostatic discharge




NOTE: Electrostatic discharge

The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD) according to EN 61340-5-1 and IEC 61340-5-1.

6.3 Structure


Figure 1 Structure

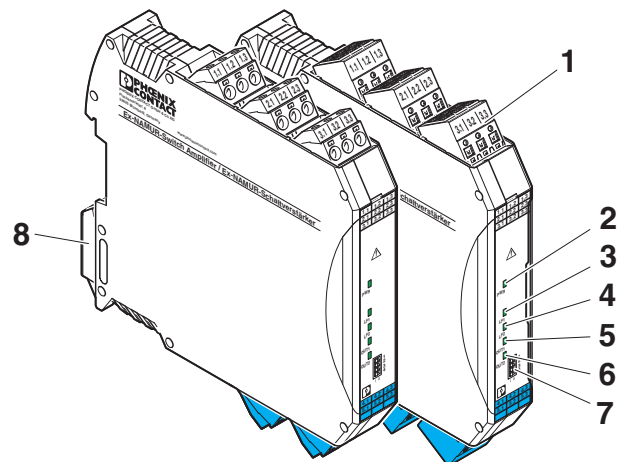

- 1 COMBICON plug-in screw or push-in connection terminal
- 2 Green "PWR" LED, power supply
- 3 Red "LF1" LED, line fault on sensor line 1
- 4 Red "LF2" LED, line fault on sensor line 2
- 5 Yellow "OUT1" LED, status of relay 1
- 6 Yellow "OUT2" LED, status of relay 2
- 7 Switch DIP 1 ... DIP 4
- 8 Snap-on foot for DIN rail mounting

6.4 Basic circuit diagram with connection terminal blocks

Figure 2 Basic circuit diagram

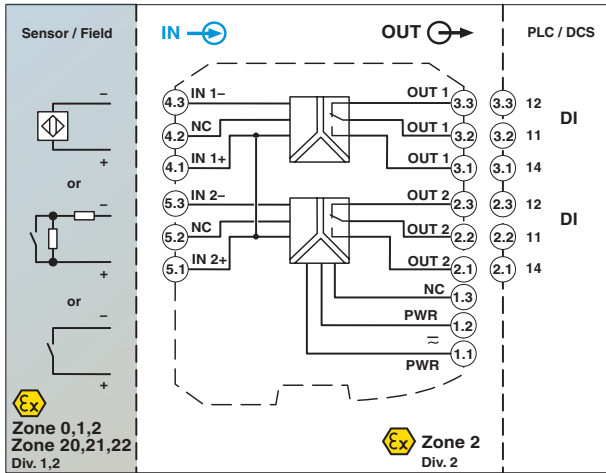

6.5 Inputs (intrinsically safe)

Connection of proximity sensors (in accordance with IEN 60947-5-6 NAMUR) and switch contacts with open circuit or resistance circuits, as well as switches

Channel 1: terminals 4.1 (+) and 4.3 (-)

Channel 2: terminals 5.1 (+) and 5.3 (-)



WARNING: Explosion hazard

The safety regulations (5.2 Intrinsic safety) must be strictly observed.

6.6 Outputs

One relay output (changeover contact) per channel

Channel 1

Terminal blocks 3.2 (grouped contact = 11) and 3.1 (N/O contact = 14)

Terminal blocks 2.2 (grouped contact = 11) and 2.1 (N/O contact = 14)

Channel 2

Terminal blocks 3.2 (grouped contact = 11) and 3.3 (N/C contact = 12)


Terminal blocks 2.2 (grouped contact = 11) and 2.3 (N/C contact = 12)

6.7 Power supply

You can feed in the supply voltage via the connection terminal blocks 1.1 (+) and 1.2 (-) (24 V AC/DC ... 230 V AC/DC).


6.8 Dimensions

Figure 3 Dimensions

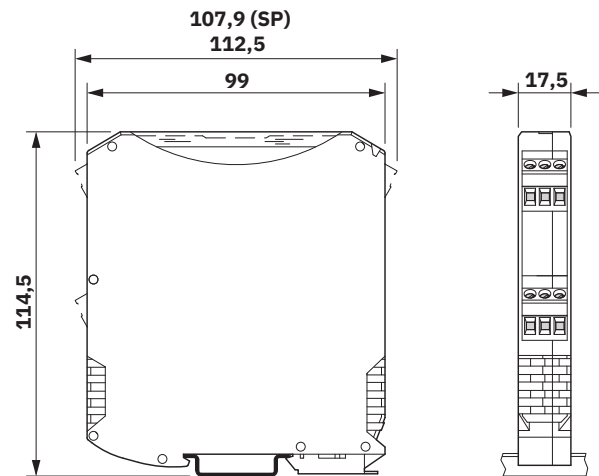

6.9 Mounting

Figure 4 Mounting and removing

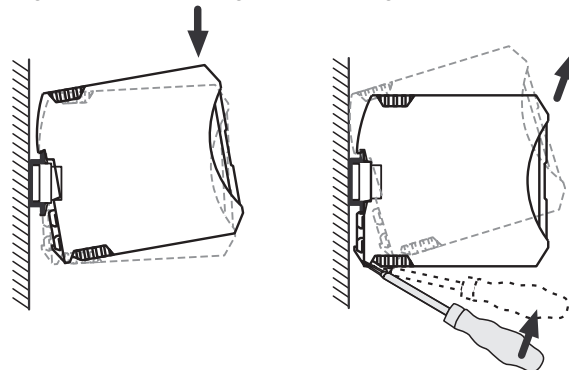

- Mount the device on a 35 mm DIN rail in accordance with EN 60715.
- Install the module in a suitable housing to meet the requirements for the protection class.

6.10 Partition plate

If you want to mount Ex i and non-Ex i devices next to each other on a DIN rail, you will require the MCR-DP partition plate (item no. 1430594). The partition plate ensures that Ex i isolating distances are maintained.


The partition plate is tailored to the MINI Analog, MINI Analog Pro, and MACX Analog device series and the QUINT4 system power supply (item no. 2904614).

The partition plate is compatible with the ME ... TBUS DIN rail connectors (e.g., item no. 1090049, 2695439).

6.11 Connecting the cables

Screw connection

Figure 5 Screw connection

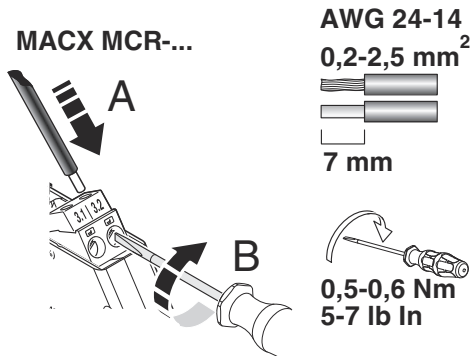


- Strip the wire by approximately 7 mm and crimp the ferrules.
- Insert the wire into the corresponding connection terminal block.
- Use a screwdriver to tighten the screw in the opening above the connection terminal block.
Tightening torque: 0.6 Nm

Push-in connection (PSPT):

Figure 6 Push-in connection

MACX MCR-...-SP

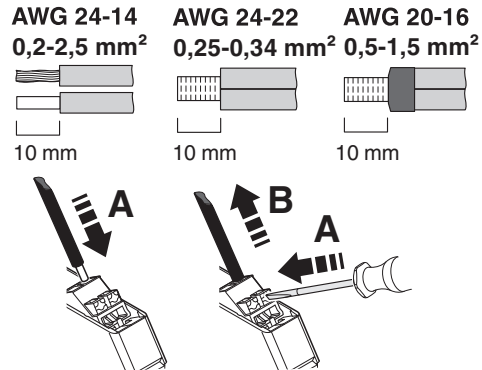

If you want to use conductors with ferrule:


- Strip the wire by approximately 10 mm and crimp ferrules to the end of the wire.
- Insert the wire into the corresponding connection terminal block.
- Push in the pushbutton with a screwdriver to release.

If you want to use conductors without ferrule:

- Strip 10 mm off the wire.
- Push the pushbutton in with a screwdriver.
- Insert the wire into the corresponding connection terminal block.
- Push in the pushbutton with a screwdriver to release.

Push-in connection (TVFKC):

Figure 7 Push-in connection

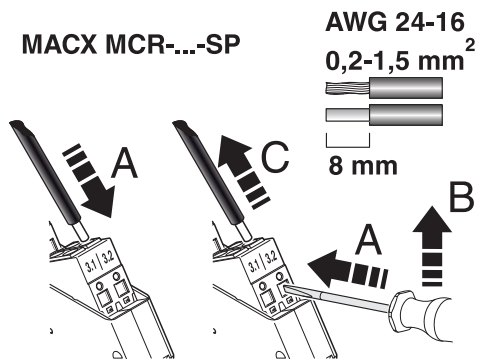

If you want to use conductors with ferrule:

- Strip the wire by approximately 8 mm and crimp ferrules to the end of the wires.
- Insert the wire into the corresponding connection terminal block.
- Push in the pushbutton with a screwdriver to release.

If you want to use conductors without ferrule:

- Strip 8 mm off the wires.
- Push the pushbutton in with a screwdriver.
- Insert the wire into the corresponding connection terminal block.
- Push in the pushbutton with a screwdriver to release.

6.12 Startup


- Before startup, check that the device is operating and wired correctly, in particular with regard to the wiring and marking of the intrinsically safe circuits.

7 Derating

7.1 Operation $\leq 60^{\circ}\text{C}$

The device is designed for operation in any mounting position with an ambient temperature range of $-40^{\circ}\text{C} \dots +60^{\circ}\text{C}$.

Figure 8 Operation $\leq 60^{\circ}\text{C}$

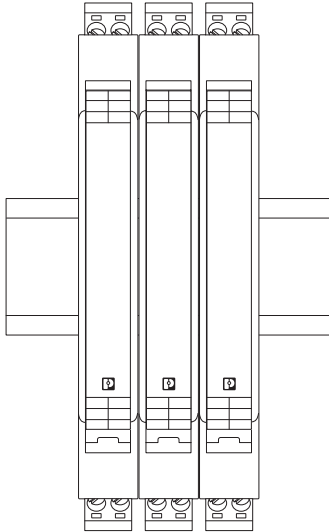

NOTE

The extended operating temperature range from $> +60^{\circ}\text{C}$ to $\leq +70^{\circ}\text{C}$ only applies to ATEX, IECEx, CCC-Ex, and UKCA approvals.

The range up to $\leq +60^{\circ}\text{C}$ applies for all other approvals.

7.2 Operation $> 60^{\circ}\text{C}$

Operation $> 60^{\circ}\text{C}$ is possible if the following installation conditions are observed.



NOTE: Overheating during operation

Special installation conditions apply for operation in the ambient temperature range of $> +60^{\circ}\text{C} \dots +70^{\circ}\text{C}$.

Ensure minimum spacing of 6.2 mm on all sides of the device and make sure that this is maintained.


Always install the device vertically with 6.2 mm spacing on a horizontally mounted DIN rail.

If you use the DIN rail connector (ME 6,2 TBUS-2 1,5/5-ST-3,81KMGY, item number 2969401) for power bridging and group error indication, you can additionally use a DIN rail connector that is not then assembled with a device to maintain the minimum spacing.

The spacing between two devices is 12.5 mm.

The free DIN rail connector does not need to be covered, as the contacts are protected mechanically and therefore cannot cause short circuits.

Figure 9 Operation $> 60^{\circ}\text{C}$

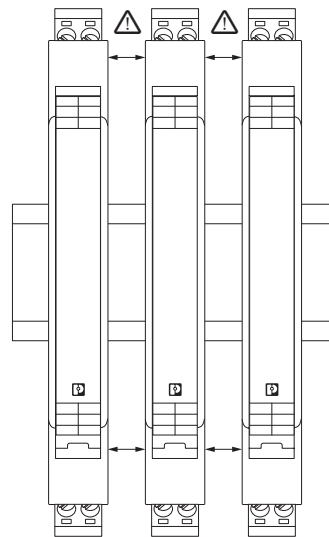

8 Configuration




NOTE

In zone 2, the DIP switches may only be actuated when the power is disconnected or when an explosive atmosphere is not present.

By default upon delivery, all DIP switches are in the “I” position.

Figure 10 DIP switches

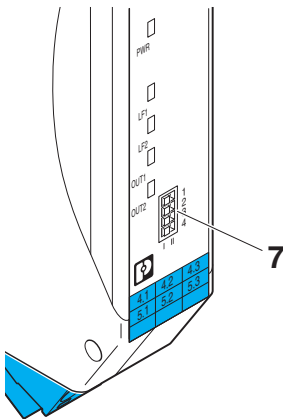

8.1 Effective direction (switch DIP 1 = channel 1, DIP 3 = channel 2)

The direction of action is set with DIP switch DIP 1 (for channel 1) and DIP 3 (for channel 2).

Channel 1	Channel 2	
DIP 1	DIP 3	Normal phase (I)
DIP 1	DIP 3	Inverse phase (II)

Relay output	Normal phase (I)	Inverse phase (II)
Switched when	$I > 2.1 \text{ mA}$	$I < 1.2 \text{ mA}$
In normal position when	$I < 1.2 \text{ mA}$	$I > 2.1 \text{ mA}$

8.2 Line fault detection (switch DIP 2 = channel 1, DIP 4 = channel 2)

Line fault detection is enabled using DIP switch DIP 2 (for channel 1) and DIP 4 (for channel 2).

I = Line fault detection disabled -

(not permitted for safety-related applications)

II = Line fault detection enabled

When line fault detection is enabled, the relay drops out in the event of a cable interrupt or short circuit to the sensor so that the output is set to the safe, non-conductive state.

The red LED (LF) flashes (NAMUR NE 44).

Operating range in accordance with EN 60947-5-6 for line fault indication:


Cable break	$0.05 \text{ mA} < I_{IN} < 0.35 \text{ mA}$
Short-circuit	$100 \Omega < R_{\text{Sensor}} < 360 \Omega$



NOTE

For switch contacts with open circuit, line fault detection (LF) must be disabled or the corresponding resistance circuit (e.g., UKK 5-2R/NAMUR (Item No. 2941662) with D-UKK 3/5 (Item No. 2770024)) must be provided directly at the contact.

Figure 11 Switch contact with open circuit, switch contact with resistance circuit

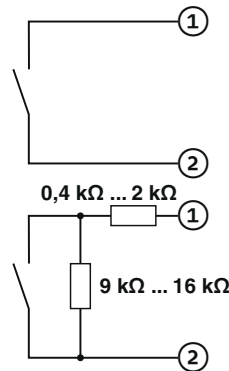

8.3 Truth table



WARNING:

For safety-related applications, only the switch position “DIP 2/DIP 4 = II” is permitted.

For safety-related applications, only switch contacts with resistance circuits are permitted at the input.

Sensor in input			Input circuit	DIP switch				Output		LED OUT	LF LED	Permitted for safety-related applications
Switch	Switch contacts with resistance circuit	NAMUR		State	Channel 1		Channel 2		Relay contact			
				1	2	3	4	N/O contact	N/C contact	Yellow	Red	
Open	Open	Blocking	OK	I	I	I	I	Open	Closed			No
Closed	Closed	Conductive	OK	I	I	I	I	Closed	Open	X		No
Open	Open	Blocking	OK	II	I	II	I	Closed	Open	X		No
Closed	Closed	Conductive	OK	II	I	II	I	Open	Closed			No
	Open	Blocking	OK	I	II	I	II	Open	Closed			Yes
	Closed	Conductive	OK	I	II	I	II	Closed	Open	X		Yes
	Any	Any	Wire break	I	II	I	II	Open	Closed		X	Yes
	Any	Any	Short-circuit	I	II	I	II	Open	Closed		X	Yes
	Open	Blocking	OK	II	II	II	II	Closed	Open	X		Yes
	Closed	Conductive	OK	II	II	II	II	Open	Closed			Yes
	Any	Any	Wire break	II	II	II	II	Open	Closed		X	Yes
	Any	Any	Short-circuit	II	II	II	II	Open	Closed		X	Yes

NAMUR: proximity switch in accordance with EN 60947-5-6 (NAMUR) or resistance-circuit switch contact

9 Comparison of the safety data



WARNING: Explosion hazard

Compare the safety data before connecting a device located in the Ex i area to this device.

Provide proof of intrinsic safety according to standard IEC/EN 60079-14 and other national standards and installation specifications, if applicable.

Safety data

Field devices	U_i, I_i, P_i, L_i, C_i
Ex i signal conditioner	U_o, I_o, P_o, L_o, C_o

The values for U_o, I_o, P_o, L_o, C_o are to be found under "Safety data in accordance with ATEX and IECEx" in the "Technical data" section.

Example for proof of intrinsic safety

Data	Condition
$U_i \geq U_o$	-
$I_i \geq I_o$	-
$P_i \geq P_o$	-
$L_i + L_c \leq L_o$	$L_i < 1\%$ of L_o or $C_i < 1\%$ of C_o
$C_i + C_c \leq C_o$	
$L_i + L_c \leq 0.5 L_o$	$L_i \geq 1\%$ of L_o and $C_i \geq 1\%$ of C_o
$C_i + C_c \leq 0.5 C_o$	

L_c and C_c depend on the cables used.

Proof of intrinsic safety (simple intrinsically safe circuit)

In a simple intrinsically safe circuit without external concentrated capacitances (C_i) and without external concentrated inductances (L_i), the full values of C_o and L_o can be exploited (see "Safety data in accordance with ATEX and IECEx" in the "Technical data" section).

Proof of intrinsic safety (mixed intrinsically safe circuit)

Condition for the mixed intrinsically safe circuit with external concentrated capacitances (C_i) and/or external concentrated inductances (L_i):

- $L_i < 1\%$ of L_o or $C_i < 1\%$ of C_o

Here, the full values of C_o and L_o can also be exploited (see "Safety data in accordance with ATEX and IECEx" in the "Technical data" section).

- $L_i \geq 1\%$ of L_o and $C_i \geq 1\%$ of C_o

Values of 50% of C_o and L_o are to be used here:

- $C_i + C_c \leq 0.5 C_o$
- $L_i + L_c \leq 0.5 L_o$

To implement longer cables, you can also use the certified value pairs as an alternative to the values reduced by 50%; they can be found under "Safety data as per ATEX and IECEx" in the "Technical data" section.

10 Safety-related applications (IEC 61508 Edition 2)

The following notes apply for the devices:

Designation	Item No.
MACX MCR-EX-SL-2NAM-R-UP	2865984
MACX MCR-EX-SL-2NAM-R-UP-SP	2924249
MACX MCR-SL-2NAM-R-UP	2865052
MACX MCR-SL-2NAM-R-UP-SP	2924304

A hardware assessment (exida FMEDA report) is available for the devices listed above: Phoenix Contact 09/12-02 R012 Version V2, Revision R0; May 2019.

10.1 Safety function/wiring

Input

Permitted for safety-related applications:

- NAMUR sensor (in accordance with EN 60947-5-6)
- Switch contact with resistance circuit (0.4 k Ω ... 2 k Ω serial and 9 k Ω ... 16 k Ω parallel)

Note: The resistance circuit regulates the behavior of a NAMUR sensor.



WARNING:

Switch contacts without resistance circuit are not permitted for safety-related applications.

Output

The output state follows the input state; this means that the safety-related function at the output is dependent on the position of switch DIP 1 for channel 1 and DIP 3 for channel 2 (set direction of action).

- | | | |
|----|------------------|--|
| I | Normal function | If a 0 signal (high-resistance NAMUR sensor, therefore lower current in the input circuit) is present, the relay output switches to the “non-conductive” or “open” state (N/O contact) and “conductive” or “closed” state (N/C contact). |
| II | Inverse function | If a 1 signal is present at the input, the relay output switches to the “non-conductive” or “open” state (N/O contact) and “conductive” or “closed” state (N/C contact). |

10.2 Diagnostic function with switch DIP 2 (channel 1) and DIP 4 (channel 2)

For safety-related applications, line fault detection is enabled, i.e., switches DIP 2/DIP 4 are in the II position.



WARNING:

The “DIP 2/DIP 4 = I” switch position is not permitted for safety-related applications.

When line fault detection is enabled, the red LED indicates any faults that occur. If a line fault is detected, the output is disabled (non-conductive). This behavior is not dependent on the position of the DIP 1 and DIP 3 switches.

10.3 Safe state

The “safe state” of the output is the energy-free state of the relay coil. This means that the N/O contact is open and the N/C contact is closed.

If the supply voltage fails or is switched off and if line faults occur, the relay output switches to the safe state.

(see Section 7.3, Truth table)

10.4 Response times

Following a state change at the input, the output enters the safe state in ≤ 40 ms.

10.5 Operating mode

Operating mode in accordance with IEC/EN 61508: “low demand rate” or “high demand rate”

10.6 Failure behavior and required response

1. The safe state is entered in the event that a line fault is detected or the supply voltage fails.
2. The safe state is achieved by removing the connection terminal blocks.

10.7 Safety integrity requirements

Safety characteristics

- Type A device (in accordance with IEC/EN 61508-1 and 61508-2)
- Safety integrity level (SIL) 2
- Systematic Capability (SC) 2
- HFT 0
- Low demand mode or high demand mode
- MTTR 24 h
- 1-channel: 1oo1 structure
- Ambient temperature 40°C
- Mission time 10 years
- Proof test coverage (PTC) 99 %

List of considered configurations

Configuration	Betrieb	Relay contact	Relay load
C1	Not inverted	N/O contact (RNO)	Load panel IV, up to 250 V AC / 2 A or 30 V DC / 2 A ohmic or low inductive load ($\cos \phi > 0.95$)
C2	Not inverted	N/O contact (RNO)	Load panel II, up to 120 V DC / 0.2 A ohmic or low inductive load ($\cos \phi > 0.95$)
C3	Inverted	N/O contact (RNO)	Load panel IV, up to 250 V AC / 2 A or 30 V DC / 2 A ohmic or low inductive load ($\cos \phi > 0.95$)
C4	Inverted	N/O contact (RNO)	Load panel II, up to 120 V DC / 0.2 A ohmic or low inductive load ($\cos \phi > 0.95$)
C5	Not inverted	N/C contact (RNC)	Load panel IV, up to 250 V AC / 2 A or 30 V DC / 2 A ohmic or low inductive load ($\cos \phi > 0.95$)
C6	Not inverted	N/C contact (RNC)	Load panel II, up to 120 V DC / 0.2 A ohmic or low inductive load ($\cos \phi > 0.95$)
C7	Inverted	N/C contact (RNC)	Load panel IV, up to 250 V AC / 2 A or 30 V DC / 2 A ohmic or low inductive load ($\cos \phi > 0.95$)
C8	Inverted	N/C contact (RNC)	Load panel II, up to 120 V DC / 0.2 A ohmic or low inductive load ($\cos \phi > 0.95$)

10.8 Failure rates

Non-inverted operation

λ_S	λ_{DD}	λ_{DU}	SFF	DC_{avg}	MTBF	Function
187 FIT	6 FIT	48 FIT	80 %	9 %	227 years	N/O contact (RNO) C1
252 FIT	6 FIT	83 FIT	76 %	7 %	189 years	N/O contact (RNO) C2
177 FIT	6 FIT	58 FIT	76 %	9 %	227 years	N/C contact (RNC) C5
232 FIT	6 FIT	103 FIT	70 %	6 %	189 years	N/C contact (RNC) C6

Inverted operation

λ_S	λ_{DD}	λ_{DU}	SFF	DC _{avg}	MTBF	Function
189 FIT	6 FIT	51 FIT	79.4 %	9 %	227 years	N/O contact (RNO) C3
254 FIT	5 FIT	86 FIT	75.2 %	5 %	189 years	N/O contact (RNO) C4
179 FIT	6 FIT	61 FIT	75.3 %	9 %	227 years	N/C contact (RNC) C7
234 FIT	6 FIT	106 FIT	69.4 %	5 %	189 years	N/C contact (RNC) C8

Low demand rate (low demand mode)

T _[PROOF] =	1 year	2 years	3 years	4 years	5 years	Function
PFD _{avg} =	$2.1 \cdot 10^{-4}$	$4.2 \cdot 10^{-4}$	$6.3 \cdot 10^{-4}$	$8.4 \cdot 10^{-4}$	$1.05 \cdot 10^{-3}$	N/O contact (RNO) C1
PFD _{avg} =	$3.63 \cdot 10^{-4}$	$7.26 \cdot 10^{-4}$				N/O contact (RNO) C2
PFD _{avg} =	$2.22 \cdot 10^{-4}$	$4.44 \cdot 10^{-4}$	$6.66 \cdot 10^{-4}$	$8.88 \cdot 10^{-4}$	$1,11 \cdot 10^{-3}$	N/O contact (RNO) C3
PFD _{avg} =	$3,75 \cdot 10^{-4}$	$7,5 \cdot 10^{-4}$				N/O contact (RNO) C4
PFD _{avg} =	$2.54 \cdot 10^{-4}$	$5.08 \cdot 10^{-4}$	$7.62 \cdot 10^{-4}$	$1.16 \cdot 10^{-3}$		N/C contact (RNC) C5
PFD _{avg} =	$4.51 \cdot 10^{-4}$	$9.02 \cdot 10^{-4}$				N/C contact (RNC) C6
PFD _{avg} =	$2.65 \cdot 10^{-4}$	$5.3 \cdot 10^{-4}$	$7.95 \cdot 10^{-4}$	$1.6 \cdot 10^{-3}$		N/C contact (RNC) C7
PFD _{avg} =	$4,64 \cdot 10^{-4}$	$9,28 \cdot 10^{-4}$				N/C contact (RNC) C8

The PFD_{avg} values for one, two, and three years are within the permissible range for SIL 2 in accordance with Table 2 of IEC/EN 61508-1. They meet the requirement of not covering more than 10% of the safety circuit or they are better than or equal to $1.00 \cdot 10^{-3}$.

The PFD_{avg} values for four and five years are within the permissible range for SIL 2 in accordance with Table 2 of IEC/EN 61508-1. They do not, however, meet the requirement of not covering more than 10% of the safety circuit or they are not better than or equal to $1.00 \cdot 10^{-3}$.

Failure limit

Based on an operating mode with a low demand rate. The percentage of the device at PFH/PFD for the entire safety loop is less than 10%.

Safety circuit according to IEC / EN 61508-1			
Sensor	Device	Processing	Actuator
25 %	< 10 %	15 %	50 %

High demand rate (high demand mode)

	C1	C2	C3	C4	C5	C6	C7	C8
PFH	$4.79 \cdot 10^{-8}$	$8.29 \cdot 10^{-8}$	$5.06 \cdot 10^{-8}$	$8.56 \cdot 10^{-8}$	$5.79 \cdot 10^{-8}$	$1.03 \cdot 10^{-7}$	$6.06 \cdot 10^{-8}$	$1.06 \cdot 10^{-7}$
Cycles/year	1000	100	1000	100	1000	100	1000	100

The switching frequency during the useful life of the relay should be taken into consideration.

Due to the cable inductance, low ohmic inductive loads are permitted ($\cos \phi > 0.95$).

Exception: switching frequency of 1000 cycles/year

Permissible switching frequency: 6/min

10.9 Conditions

- The failure rates of the components used remain constant throughout the period of use.
- The propagation of errors by the device in the system is not taken into consideration.
- Errors during parameterization are not taken into consideration.
- The repair time (replacement) should be eight hours.
- The failure rates of the external power supply are not taken into consideration.
- Line fault detection is enabled.
- The average temperature at which the device is to be used is +40°C. In this case, normal industrial conditions are assumed.
- The specified error rates are based on an ambient temperature of +40°C. For an ambient temperature of +60°C, the error rates must be multiplied by factor 2.5. Factor 2.5 is based on guide values.

10.10 Installation and startup



NOTE:

Installation, operation, and maintenance may only be carried out by professionals.

During installation, observe the instructions in the package slip:

Designation	MNR No.
PACKB.MACX MCR-SL-2NAM-R-UP(-SP)	9055397
PACKB.MACX MCR-EX-SL-2NAM-R-UP(-SP)	9051070

The package slip is supplied with the device. It can also be downloaded at: www.phoenixcontact.com/products.

- Configure the device according to your safety demand in accordance with the truth table. Note the switch positions that are not permitted for safety-related applications.
- Connect the device according to the installation notes.
- Check that the device operates correctly with the sensor or switch with resistance circuit connected.
- Start up the safety circuit and check that it operates correctly.
- To avoid impermissible currents, connect an external 4 A (T) fuse on the contact side of the relay.
- When installed, an external temperature monitoring system must be used.
- The device must be installed in a control cabinet with key lock and at least IP54 degree of protection.
- The power supply used must compensate brief interruptions (≤ 20 ms).

10.11 Notes on operation

In normal operation, only the green LED (PWR) is permanently on.

The yellow LEDs (OUT1/OUT2) indicate the switching state of the relay output.

When line fault detection is enabled, the red LEDs (LF1/LF2) indicate any faults that occur. The safe state is entered in the event that a line fault is detected or the supply voltage fails.

10.12 Startup and restart

Switch on or restart the device

The output enters the state without oscillation (according to the truth table). A reset is not required.

What happens when a line fault is detected and what must the user do?

The fault is indicated by the red LED and the output enters the “non-conductive” state regardless of the input signal and operating mode (normal or inverse mode).

The user must eliminate the line fault (short circuit or break in the sensor cable).

The device output is not blocked when fault detection is triggered (no lock or reset). Undefined line states that occur during repairs can switch the output. The user must prevent this from happening by disconnecting the supply voltage or removing the connection terminal blocks.

Other options that have the same result and do not present an additional hazard are also permitted.

The line fault is removed

The user must ensure that a defined state is entered using the truth table. The device is restarted in the same way as during initial startup. The device then behaves as described under “Startup or restart of the device”.

10.13 Recurring checks

The function of the entire safety loop must be checked regularly according to IEC/EN 61508 and IEC/EN 61511.

The intervals for checking are specified by the intervals of each individual device within the safety loop.

It is the operator's responsibility to select the type of checks and the checking intervals in the specified time period.

Checking must be carried out in such a way that the correct function of the safety equipment in conjunction with all components can be verified.

Possible procedure for recurring checks for discovering dangerous and undetected device failures

1. Apply an appropriate signal at the input of the device in order to obtain the non-conductive state at the output.
2. Check whether the output is non-conductive.
3. Check the conductive state in the same manner.
4. Restore the safety circuit to full functionality.
5. Resume normal operation.

Around 99% of the possible "du" ("dangerous undetected") failures in the device are discovered with this test.

If the device fails the function test, it must be taken out of operation and the process put into a safe state by other means.

10.14 Repair

The devices have a long service life, are protected against malfunctions, and are maintenance-free.

However, if a device should fail, send it back to Phoenix Contact immediately. The type of malfunction and possible cause must also be stated.

Please use the original packaging or other suitable safe packaging when sending devices back for repairs or recalibration.

Phoenix Contact GmbH & Co. KG
Abteilung Service und Reparatur
Flachmarktstr. 8
32825 Blomberg
GERMANY

10.15 Standards

The devices are developed and tested according to the following standards:

- IEC/EN 61508-1: 2011** Functional Safety of electrical/electronic/programmable electronic safety-related systems - Part 1: General requirements
- IEC/EN 61508-2: 2011** Functional Safety of electrical/electronic/programmable electronic safety-related systems - Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems
- IEC/EN 61326-1: 2006** Electrical equipment for measurement, control and laboratory use - EMC requirements
- IEC/EN 61326-3-2: 2006** Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 3-2: Immunity requirements for safety-related systems and for equipment intended to perform safety-related functions (Functional Safety) - Industrial applications with specified electromagnetic environment

10.16 Abbreviations

Abbreviation		Meaning
DC _D	Diagnostic coverage of dangerous failures	Diagnostic coverage of dangerous failures: $DC_D = \lambda_{DD} / (\lambda_{DU} + \lambda_{DD})$
DC _S	Diagnostic coverage of safe failures	Diagnostic coverage of safe failures: $DC_S = \lambda_{SD} / (\lambda_{SU} + \lambda_{SD})$
FIT	Failure in time	1 FIT = 1 failure/10 ⁹ h
HFT	Hardware fault tolerance	Hardware fault tolerance: ability of a function unit to continue with the execution of a demanded function despite existing faults or deviations
λ_D	Rate of dangerous failures	Proportion of dangerous failures per hour
λ_{DD}	Rate of dangerous detected failures	Proportion of detected dangerous failures per hour
λ_{DU}	Rate of dangerous undetected failures	Proportion of undetected dangerous failures per hour
λ_S	Rate of safe failures	Proportion of safe failures per hour
λ_{SD}	Rate of safe detectable failures	Proportion of detectable safe failures per hour
λ_{SU}	Rate of safe undetectable failures	Proportion of undetectable safe failures per hour
MTBF	Mean time between failures	Mean time between consecutive failures
PFD _{avg}	Average probability of failure on demand	Average probability of dangerous failure on demand of a safety function
PFH _D	Probability of a dangerous failure per hour	Probability of failure per hour for the safety function
SFF	Safe failure fraction	Proportion of safe failures: proportion of failures without the potential to set the safety-related system to a dangerous or impermissible function state
SIL	Safety integrity level	International standard IEC 61508 defines four discrete safety integrity levels (SIL 1 to 4). Each level corresponds to a probability range for the failure of a safety function. The higher the safety integrity level of safety-related systems, the lower the probability that the demanded safety functions will not be performed.

11 Safety-related applications (IEC 61508 Edition 1)

The following notes apply for the devices:

Designation	Item No.
MACX MCR-EX-SL-2NAM-R-UP	2865984
MACX MCR-EX-SL-2NAM-R-UP-SP	2924249
MACX MCR-SL-2NAM-R-UP	2865052
MACX MCR-SL-2NAM-R-UP-SP	2924304

A hardware assessment (FMEDA report) is available for the devices listed above: Exida 09/12-02 R012 V1R0.

11.1 Circuits

Input

- NAMUR sensor (in accordance with EN 60947-5-6)
- Switch contact with resistance circuit (0.4 kΩ ... 2 kΩ serial and 9 kΩ ... 16 kΩ parallel)

Note: The resistance circuit regulates the behavior of a NAMUR sensor.



WARNING:

Switch contacts without resistance circuit are not permitted for safety-related applications.

Output

The safety-related function at the output is dependent on the position of switches DIP 1 (for channel 1) and DIP 3 (for channel 2).

- | | | |
|----|------------------|--|
| I | Normal function | In the event of a 0 signal (NAMUR sensor in a high-resistance state, therefore low current in the input circuit), the output switches to the “non-conductive” or “open” state. |
| II | Inverse function | In the event of a 1 signal at the input, the output switches to the “non-conductive” or “open” state. |

11.2 Diagnostic function with switch DIP 2/DIP 4

For safety-related applications, line fault detection is enabled, i.e., switches DIP 2/DIP 4 are in the II position.



WARNING:

The “DIP 2/DIP 4 = I” switch position is not permitted for safety-related applications.

When line fault detection is enabled, the red LED indicates any faults that occur. If a line fault is detected, the output is disabled (non-conductive). This behavior is not dependent on the position of the DIP 1 and DIP 3 switches.

11.3 Safe state

“Safe state” means that the N/O contact is open.

If the supply voltage fails or is switched off, the relay output goes into the safe state.

11.4 Response times

Following a state change at the input, the output enters the safe state in ≤ 40 ms.

11.5 Operating mode

Operating mode in accordance with IEC/EN 61508: “Low demand mode”

11.6 Failure behavior and required response

1. The safe state is entered in the event that a line fault is detected or the supply voltage fails.
2. The safe state is achieved by removing the connection terminal blocks.

11.7 Safety integrity requirements

Error rates

- Type A device (according to IEC/EN 61508-2)
- Safety integrity level (SIL) 2
- HFT 0
- MTTR 24 h
- 1oo1 architecture
- Ambient temperature 40°C

Non-inverted operation

Failure rate in FIT

λ_{SD}	λ_{SU}	λ_{DD}	λ_{DU}	SFF	DC _S	DC _D
6	403	0	63	86.6 %	1.4 %	0 %

The MTBF is 226 years.

PFD_{avg} values

T _[PROOF] =	1 year	2 years	5 years
PFD _{avg} =	3.01 * 10 ⁻⁴	5.74 * 10 ⁻⁴	1.39 * 10 ⁻³

Inverted operation

Failure rate in FIT

λ_{SD}	λ_{SU}	λ_{DD}	λ_{DU}	SFF	DC _S	DC _D
0	413	0	65	86.4 %	0 %	0 %

PFD_{avg} values

T _[PROOF] =	1 year	2 years	5 years
PFD _{avg} =	3.10 * 10 ⁻⁴	5.92 * 10 ⁻⁴	1.44 * 10 ⁻³

The value for 5 years means that the calculated PFD_{avg} values are within the permitted range for SIL 2 according to Table 2 of IEC/EN 61508-1. However, they do not meet the requirement to not cover more than 10% of the safety circuit, i.e., to be better than or equal to 1.00 * 10⁻³.

The values for 1 and 2 years mean that the calculated PFD_{avg} values are within the permitted range for SIL 2 according to Table 2 of IEC/EN 61508-1. They meet the requirement to not cover more than 10% of the safety circuit, i.e., they are better than or equal to 1.00 * 10⁻³.

Failure limit

Based on an operating mode with a low demand rate. The percentage of the device at PFH/PFD for the entire safety loop is less than 10%.

Safety circuit according to IEC / EN 61508-1			
Sensor	Device	Processing	Actuator
25 %	< 10 %	15 %	50 %

11.8 Conditions

- The failure rates of the components used remain constant throughout the period of use.
- The propagation of errors by the device in the system is not taken into consideration.
- Errors during parameterization are not taken into consideration.
- The repair time (replacement) should be eight hours.
- The failure rates of the external power supply are not taken into consideration.
- Line fault detection is enabled.
- The average temperature at which the device is to be used is +40°C. In this case, normal industrial conditions are assumed.
- The specified error rates are based on an ambient temperature of +40°C. For an ambient temperature of +60°C, the error rates must be multiplied by factor 2.5. Factor 2.5 is based on guide values.

11.9 Installation and startup



NOTE:

Installation, operation, and maintenance may only be carried out by professionals.

During installation, observe the instructions in the package slip:

Designation	MNR No.
PACKB.MACX MCR-SL-2NAM-R-UP(-SP)	9055397
PACKB.MACX MCR-EX-SL-2NAM-R-UP(-SP)	9051070

The package slip is supplied with the device. It can also be downloaded at: www.phoenixcontact.com/products.

- Configure the device according to your safety demand in accordance with the truth table. Note the switch positions that are not permitted for safety-related applications.
- Connect the device according to the installation notes.
- Check that the device operates correctly with the sensor or switch with resistance circuit connected.
- Start up the safety circuit and check that it operates correctly.

11.10 Notes on operation

In normal operation, only the green LED (PWR) is permanently on.

The yellow LEDs (OUT1/OUT2) indicate the switching state of the relay output.

When line fault detection is enabled, the red LEDs (LF1/LF2) indicate any faults that occur. The safe state is entered in the event that a line fault is detected or the supply voltage fails.

11.11 Startup and restart

Switch on or restart the device

The output enters the state without oscillation (according to the truth table). A reset is not required.

What happens when a line fault is detected and what must the user do?

The fault is indicated by the red LED and the output enters the “non-conductive” state regardless of the input signal and operating mode (normal or inverse mode).

The user must eliminate the line fault (short circuit or break in the sensor cable).

The device output is not blocked when fault detection is triggered (no lock or reset). Undefined line states that occur during repairs can switch the output. The user must prevent this from happening by disconnecting the supply voltage or removing the connection terminal blocks.

Other options that have the same result and do not present an additional hazard are also permitted.

The line fault is removed

The user must ensure that a defined state is entered using the truth table. The device is restarted in the same way as during initial startup. The device then behaves as described under “Startup or restart of the device”.

11.12 Recurring checks

The function of the entire safety loop must be checked regularly according to IEC/EN 61508 and IEC/EN 61511.

The intervals for checking are specified by the intervals of each individual device within the safety loop.

It is the operator's responsibility to select the type of checks and the checking intervals in the specified time period.

Checking must be carried out in such a way that the correct function of the safety equipment in conjunction with all components can be verified.

Possible procedure for recurring checks for discovering dangerous and undetected device failures

1. Apply an appropriate signal at the input of the device in order to obtain the non-conductive state at the output.
2. Check whether the output is non-conductive.
3. Check the conductive state in the same manner.
4. Restore the safety circuit to full functionality.
5. Resume normal operation.

Around 99% of the possible “du” (“dangerous undetected”) failures in the device are discovered with this test.

If the device fails the function test, it must be taken out of operation and the process put into a safe state by other means.

11.13 Repair

The devices have a long service life, are protected against malfunctions, and are maintenance-free.

However, if a device should fail, send it back to Phoenix Contact immediately. The type of malfunction and possible cause must also be stated.

Please use the original packaging or other suitable safe packaging when sending devices back for repairs or recalibration.

Phoenix Contact GmbH & Co. KG
Abteilung Service und Reparatur
Flachmarktstr. 8
32825 Blomberg
GERMANY

11.14 Standards

The devices are developed and tested according to the following standards:

- IEC/EN 61508: 2001** Functional Safety of electrical/electronic/programmable electronic safety-related systems
- IEC/EN 61326-1: 2006** Electrical equipment for measurement, control and laboratory use - EMC requirements

11.15 Abbreviations


Abbreviation		Meaning
DC _D	Diagnostic coverage of dangerous failures	Diagnostic coverage of dangerous failures: $DC_D = \lambda_{DD} / (\lambda_{DU} + \lambda_{DD})$
DC _S	Diagnostic coverage of safe failures	Diagnostic coverage of safe failures: $DC_S = \lambda_{SD} / (\lambda_{SU} + \lambda_{SD})$
FIT	Failure in time	1 FIT = 1 failure/10 ⁹ h
HFT	Hardware fault tolerance	Hardware fault tolerance: ability of a function unit to continue with the execution of a demanded function despite existing faults or deviations
λ_D	Rate of dangerous failures	Proportion of dangerous failures per hour
λ_{DD}	Rate of dangerous detected failures	Proportion of detected dangerous failures per hour
λ_{DU}	Rate of dangerous undetected failures	Proportion of undetected dangerous failures per hour
λ_S	Rate of safe failures	Proportion of safe failures per hour
λ_{SD}	Rate of safe detectable failures	Proportion of detectable safe failures per hour
λ_{SU}	Rate of safe undetectable failures	Proportion of undetectable safe failures per hour
MTBF	Mean time between failures	Mean time between consecutive failures
PFD _{avg}	Average probability of failure on demand	Average probability of dangerous failure on demand of a safety function
PFH _D	Probability of a dangerous failure per hour	Probability of failure per hour for the safety function
SFF	Safe failure fraction	Proportion of safe failures: proportion of failures without the potential to set the safety-related system to a dangerous or impermissible function state
SIL	Safety integrity level	International standard IEC 61508 defines four discrete safety integrity levels (SIL 1 to 4). Each level corresponds to a probability range for the failure of a safety function. The higher the safety integrity level of safety-related systems, the lower the probability that the demanded safety functions will not be performed.

12 Digital nameplate

The digital nameplate provides the option of obtaining product-specific data related to a specific serial number.

If you scan the QR code (digital nameplate) on the device, you can, for example, retrieve documents on the production status as well as clearly identify the hardware and firmware status of the device at hand.

Figure 12 Scan QR code

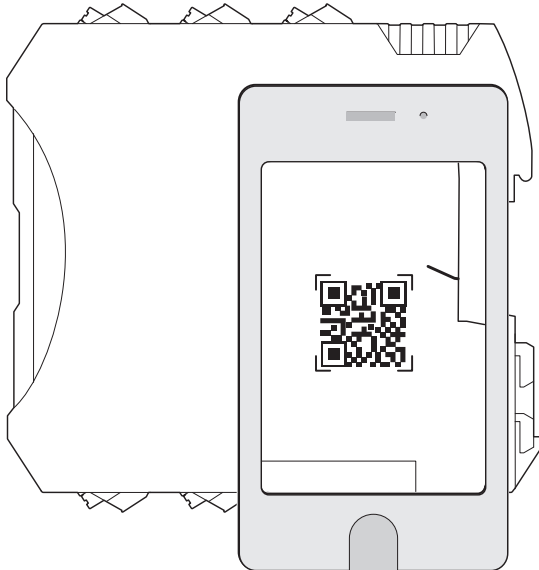

13 Revision history

Version	Date	Description
09	2023-08-18	Figure 2 adjusted due to new printing
		Description of new Push-in connection technology (PSPT) added
		Description of digital nameplate added
		Update of the temperature ranges and addition of derating
		Technical data updated for altitude ranges between 2000 m and 5000 m
		Adaptation within the scope of an update of the IECEx approval
		Adaptation within the scope of an update of the ATEX approval
		Adaptation within the scope of an update of the CCC Ex approval
		Adaptation within the scope of an update of the UKCA approval